

Bissell®

POWERCLEAN MAX MODEL 3112F




Important Safety Instructions.....	2
What's in the Box?.....	3
Assembly.....	3
Filling the Clean Water Tank.....	3
Using Your Machine.....	4
After-Cleaning Care.....	6
Replacing the Belts and Brush Rolls.....	7
Storing Your Machine.....	8
Troubleshooting.....	8
Warranty.....	8



Product View

1. Upper Handle
2. Spray Trigger
3. Clean Water Tank
4. Carry Handle
5. Dirty Water Tank
6. Accessory Hose Door

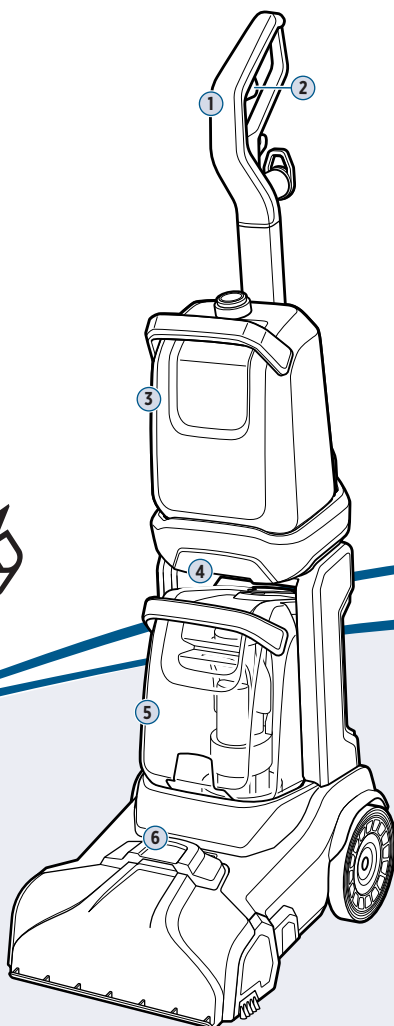

SYMBOL	EXPLANATION
	Caution.
	Read operator's manual.
	Risk of fire.
	Risk of electric shock.
	For indoor use only.
	Do not overwet carpet. Use only on carpet moistened by the cleaning process.
	Use only BISSELL® cleaning formulas intended for use with this machine.
	Disconnect power before servicing.

SYMBOL	EXPLANATION
	Protection against moving parts.
	Risk of automatic start-up.
	Use warm water, temperature up to 60°C.
	Check the manufacturer's tag before cleaning textile. "W" on the tag as shown means you can use your cleaner.
	Lock.
	This symbol on the product and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points. Please contact your local authority for further details of your nearest designated collection point.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug from electrical socket when not in use, before cleaning, maintaining, or servicing the appliance, and if your appliance has an accessory tool with a moving brush, before connecting or disconnecting the tool.
- Do not immerse in water or liquid.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Do not run appliance over cord.
- Do not use with damaged cord or plug.
- Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners.
- Keep cord away from heated surfaces.
- If the appliance has a handheld accessory like pet brush, motor driven head, etc., the user shall avoid entrapment.
- Do not leave appliance when plugged in.
- Use only the type and amount of liquids specified under the operations section of this guide.
- Liquid must not be directed towards equipment containing electrical components.
- Always connect to a properly earthed electrical socket. Do not modify earthed plug.
- Always install float before any wet pick-up operation.
- To unplug, grasp the plug, not the cord.

- Do not handle plug or appliance with wet hands.
- Turn OFF all controls before unplugging.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Use only as described in this user guide.
- Use only manufacturer's recommended attachments.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorised service center.
- Do not put any object into openings.
- Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as petroleum, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use appliance in an enclosed space filled with vapours given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapours.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without filters in place.
- Use indoors only.
- Floor slippery when wet.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- A hazard may occur if the appliance runs over the supply cord.

SAVE THESE INSTRUCTIONS

ORIGINAL INSTRUCTIONS.

FOR OPERATION ON A 220-240 VOLT A.C. 50-60 HZ POWER SUPPLY ONLY.

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

IMPORTANT INFORMATION




- Keep appliance on a level surface.
- If your appliance has a motorised brush roll, do not leave machine running in the same spot without the handle fully upright.
- To reduce the risk of a leaking condition, do not store appliance where freezing may occur. Damage to internal components may result.
- Plastic tanks are not dishwasher safe. Do not put tanks in dishwasher.
- Always test machine and chemicals prior to use on a small inconspicuous area to ensure fabric suitability and colour fastness.

What's in the Box?

Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.

						
Upper Handle	Base with Dirty Water Tank	Clean Water Tank	(2) BISSELL® Trial Formulas	Accessory Bag & Hose	7.5 cm Tough Stain Tool	2-in-1 Crevice Tool

Assembly

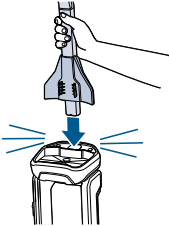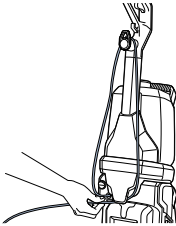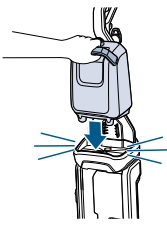
		
1. Insert the upper handle in the top of the base until it clicks into place.	2. Wrap cable around lower cable wrap and release hook.	3. Align clean water tank with the grooves under the handle and slide the tank into place.

Filling the Clean Water Tank



This machine is compatible with BISSELL® formulas made for upright carpet cleaners. Always use genuine BISSELL formulas in your machine. Other formulas may harm the machine

Note: Fill with warm (140°F/60°C MAX) tap water and add the appropriate BISSELL® formula. Do not use boiling water. Do not heat water or tank in microwave.

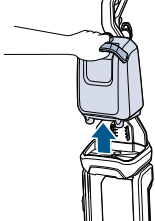		
1. Choose your formula.* Scan the QR code with your smartphone camera or visit BISSELL.com for formulas.	2. Lift the tank straight up to remove.	3. Unscrew the yellow Easy Fill cap from the tank.
CONTINUED ON NEXT PAGE ➡		

***Compatible BISSELL formulas include:** Stain Pretreat, Pet Stain Pretreat, Oxy Boost, Pro Stain & Odour, Pet Stain & Odour, Stain & Odour, Ambipur Blosson & Breeze, Pro Pet Urine Eliminator + Oxy, Allergen, Wash & Remove + Antibacterial

Certain trademarks used under license from The Procter & Gamble Company or its affiliates.

⚠ WARNING To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL formula intended for use with this machine. Use of cleaning formulas that contain eucalyptus, lemon or pine oil may damage this appliance and void the warranty. Chemical spot cleaners or solvent-based soil removers should not be used. These products may react with the plastic materials used in your carpet washer causing cracking or pitting.

Filling the Clean Water Tank (continued)

4. Fill the tank with water and formula. **NOTICE:** BISSELL ANTIBACTERIAL formula is only for BISSELL machines with Easy Fill System.



Cleaning Formula

Add hot tap water and formula to the WATER and FORMULA fill lines above the DEEP CLEAN or EXPRESS CLEAN labels.



Trial-Size ANTIBACTERIAL Formula

Add hot tap water and formula to the WATER and FORMULA fill lines above the **easy fill** label.




Future Use with Full-Size ANTIBACTERIAL Formula with Easy Fill System

Add hot tap water to WATER fill line above **easy fill** line. Twist yellow cap back onto tank. Firmly insert formula bottle into cap on tank and squeeze until formula reaches **easy fill** line. Skip to step 6.



5. Screw the cap back onto the tank.

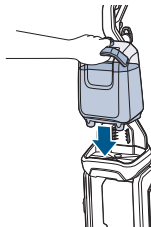

6. Align tank with grooves on machine and slide into place.


Using Your Machine

Visit global.BISSELL.com for how-to carpet cleaning videos.




Tips Before Cleaning


- Vacuum thoroughly to pick up loose debris and pet hair.
- Check the manufacturer's tag and test an inconspicuous spot for colorfastness and fabric suitability.
- Don't use on silk or delicate rugs. To prevent damage to Berber carpets, avoid repeated strokes in the same area.
- It is common to refill the clean water tank and empty the dirty water tank multiple times during cleaning. Room size and cleaning speed both affect how often the tank may need to be refilled and/or emptied.
- Important: The brush roll remains on while cleaning with the hose and tool. Do not allow cleaner to sit in one location for an extended period of time, as damage to floor can result.

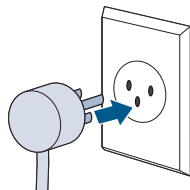

1. Plug into a properly grounded outlet.

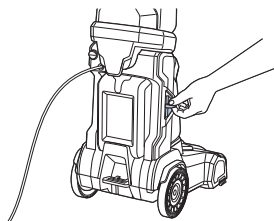


2. Select cleaning mode based on the below chart.

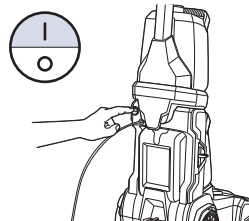


3. Press the power button to turn the machine ON.


CONTINUED ON NEXT PAGE ➡

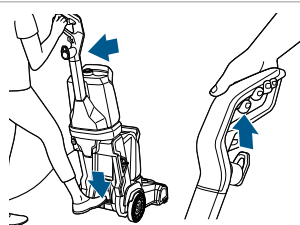

4. Press the recline pedal. Hold the spray trigger for 10 seconds to wet the brush roll.

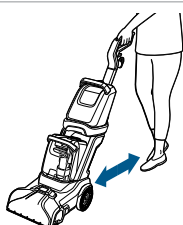

5. Make passes based on your selected cleaning mode. See chart below.

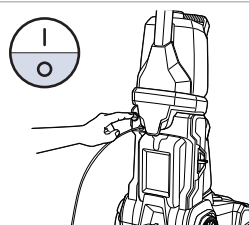

6. When finished, turn machine OFF.

Note: When solution is flowing, bubbles will form at the edges of the nozzle. Holding the trigger continuously may result in overwetting your carpet.

Floor Cleaning Modes & Instructions

Deep Clean Mode

Delivers a deep clean to your carpet.

1. Hold Spray Trigger
 - 1 pass forward
 - 1 pass back
2. Release the Spray Trigger
 - 1 pass forward
 - 1 pass back

Deep Clean Mode with BISSELL® Deep Clean + ANTIBACTERIAL Formula


1. Hold Spray Trigger
 - 1 pass forward
 - 1 pass back
 - 1 pass forward
2. Release the Spray Trigger
 - 1 pass back

Express Clean Mode


Provides a lighter clean that dries in about 45 minutes.

1. Hold Spray Trigger
 - 1 pass forward
 - 1 pass back
2. Release the Spray Trigger
 - 1 pass forward
 - 1 pass back


Using the Hose and Tools

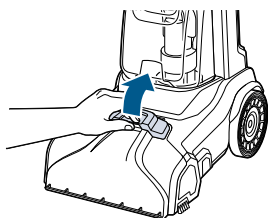


1. Lift the accessory hose door toward the machine to open.

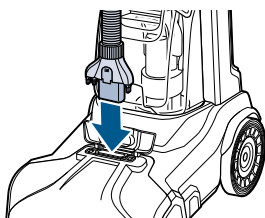

 
2. Insert hose with colored clip facing away from machine. It will click into place.




3. Attach the tool to the end of the hose.

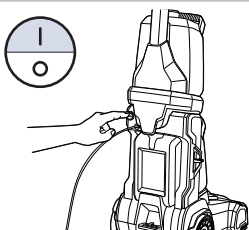

4. Press the power button to turn the machine ON.

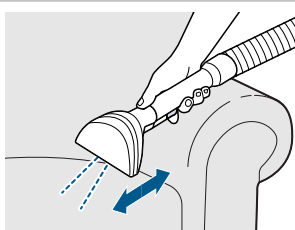

5. Hold tool about 1 inch above soiled surface. Press spray trigger to apply cleaning solution. Do not overwet.

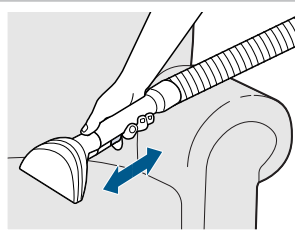






6. Release trigger, apply downward pressure, and pull toward you to suction up dirt and cleaning solution.

After-Cleaning Care




Visit **BISSELL.com** for tips on maintaining your machine.



Emptying the Dirty Water Tank

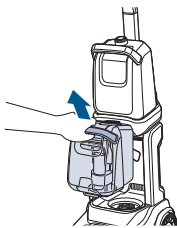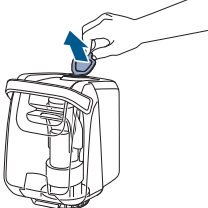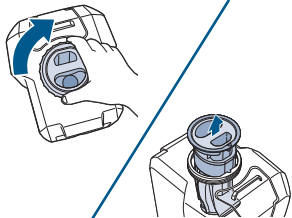
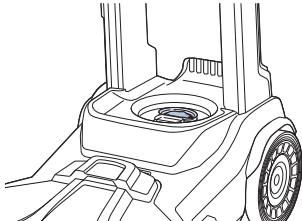
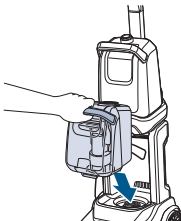
		
1. Pull dirty water tank up and away to remove.	2. Quick empty: Pull rubber tab (in the middle of the tank) and tilt to pour. When closing the rubber tab, make sure all edges are sealed tight.	3. Final clean and rinse: Unscrew ring. Remove float stack. Rinse and return to tank, lining up the arrows to lock into place. Screw ring back on.
		
4. Clean the red filter below the dirty water tank by wiping off any remaining dirt or debris.	5. Reinstall dirty water tank with the bottom in first. Then, tilt it toward the machine and push it until it clicks into place.	

Cleaning the Nozzle

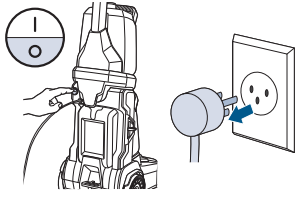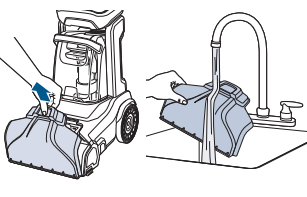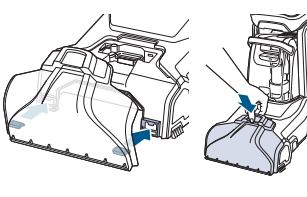		
1. Turn OFF and unplug the machine.	2. Lift the back of the accessory hose door to open and remove nozzle. Rinse under warm water to remove debris.	3. Line up the two hooks on the nozzle to the bottom of the foot. Rotate the nozzle down and click into place.

⚠ WARNING To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.







Cleaning the Brush Roll

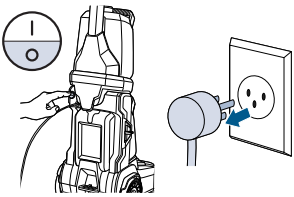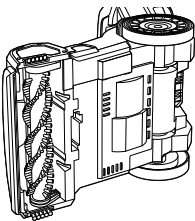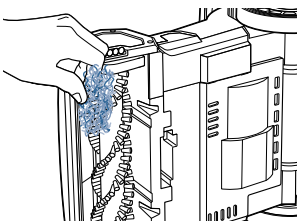		
1. Turn OFF and unplug the machine.	2. Lay the machine down on its back or side.	3. Remove debris or hair from the brush rolls.

Replacing the Belts and Brush Rolls

➤ For replacement parts, head to **BISSELL.com**.

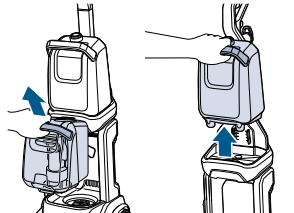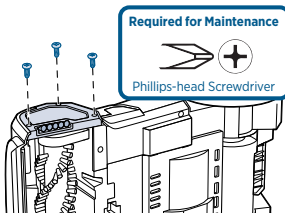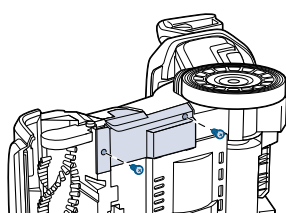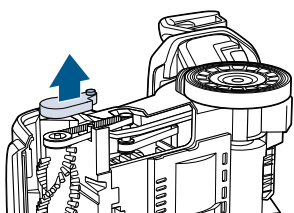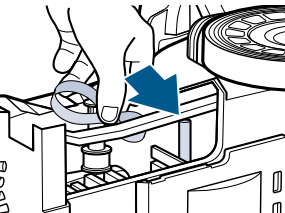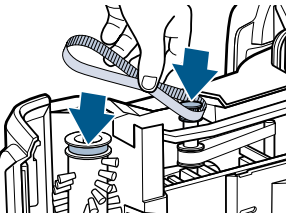

		
1. Unplug the machine. Remove both tanks. With the machine reclined, locate the belt access cover and lay the machine on its side.	2. Remove the 3 screws on the brush access cover using a Phillips-head screwdriver. Remove the access cover to expose the cogged belt and brush roll.	3. Remove the 2 screws on the belt access cover using a Phillips-head screwdriver. Remove the access plate to expose the flat pump belt. If flat pump belt is broken, you may gently remove it from the machine. We will replace this belt in Step 5.
		
4. Remove the brush cover by lifting straight up. Remove the cogged large pump belt. The brush rolls can be replaced or cleaned at this time, if needed.	5. If flat pump belt is broken, place a new belt around the red area of large pulley. Use thumb to stretch it toward back of machine and transfer onto the metal axle.	6. To replace the cogged pump belt, wrap the new belt around the small metal-toothed pulley. While wrapped around the pulley, stretch and wrap around the brush gear.

⚠ WARNING To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

Storing Your Machine

Once your cleaning is complete, make sure both the dirty and clean water tanks are emptied, rinsed out and dried before the next use. Wrap cable around cable wrap for storage. Store machine in a protected, dry area.

NOTICE To reduce the risk of a leaking condition, do not store machine where freezing may occur. Damage to internal components may result.

Troubleshooting



For a comprehensive walkthrough of your product and support tips visit **BISSELL.com**. Any other servicing should be performed by an authorized service representative.

Warranty

This warranty gives you specific legal rights, in addition to rights you may have under the *Australian Consumer Law*. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact your local BISSELL® Consumer Care on the details set out below.

It may be necessary to obtain some of your personal information, such as a mailing address, to fulfill terms of this warranty. Any personal data will be handled pursuant to BISSELL's Privacy Policy, which can be found at global.BISSELL.com/privacy-policy.

BISSELL® Two-Year Warranty

Subject to the *conditions identified below, BISSELL will repair or replace (with new, refurbished, lightly used, or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for two years any defective or malfunctioning part due to manufacturer defect. This warranty applies to product used for personal purposes, and not commercial or rental service.

This warranty does not apply to fans or routine maintenance or consumable components such as filters, belts, brush rolls, etc., damage or malfunction caused by negligence, abuse, neglect, unauthorised repair, or any other use not in accordance with the user guide. BISSELL recommends that the original packaging be kept for the duration of the warranty period in case such need arises within the warranty period that the item needs repacking and transportation.

*Conditions of Warranty

Subject to whether such loss is reasonably foreseeable, BISSELL and its in-country distributors are not liable for incidental or consequential damages of any nature associated with the use of this product.

This warranty is in addition to other rights or remedies under law. Nothing in this warranty excludes, limits or modifies any liability of BISSELL which is imposed by law, or limits or modifies any remedy available to the consumer which is granted by law. To make a claim under this warranty contact BISSELL Australia PTY LTD

(details below). Contact BISSELL prior to returning any goods. Where agreed, BISSELL will reimburse reasonable postage / handling costs (if any) for returning goods to BISSELL. To claim expenses incurred in making a claim under this warranty please provide BISSELL with a copy of the receipt of the expenses by email or post.

For Australian Consumers Only:

Our goods come with guarantees that cannot be excluded under the *Australian Consumer Law*. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Consumer Care

Australia

Telephone: 1300 247 735
Website: www.BISSELL.com.au

New Zealand

Telephone: 0800 247 735
Website: www.BISSELL.co.nz

But wait, there's more!

Join us online for a complete guide to your new product, including troubleshooting, parts and more. **Go to BISSELL.com.**



INFO



VIDEOS



PARTS