



LITTLE GREEN™

PORTABLE CARPET AND UPHOLSTERY CLEANER


MODEL 4098F









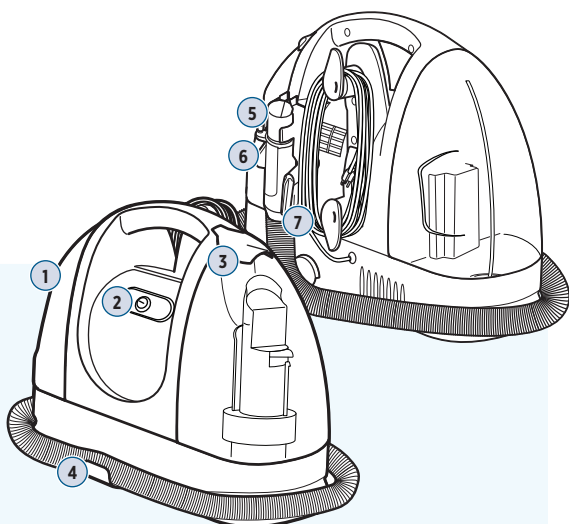







Important Safety Instructions	2
Assembly	3
Cleaning Formulas	4
Filling the Clean Water Tank	4
Getting Ready to Clean	5
Using the Tools.....	6
After-Cleaning Care.....	6
Limited Warranty	7



Product Overview

1. Clean Water Tank
2. Power Button
3. Dirty Water Tank and Retainer Lever
4. Flex Hose and Clip
5. Hose Grip Bracket
6. Spray Trigger
7. Hose Grip Bracket Latch



SYMBOL	EXPLANATION
	Caution.
	Read operator's manual.
	Risk of fire.
	Risk of electric shock.
	Do not expose to rain.
	Store indoors.
	Do not overwet carpet. Use only on carpet moistened by the cleaning process.
	Use only BISSELL® cleaning formulas intended for use with this machine.
	Disconnect power before servicing.
	Allow parts to dry.
	Use warm water, temperature up to 60°C.
	Lock.
	Do not freeze.
	Check the manufacturer's tag before cleaning textile. "W" on the tag as shown means you can use your cleaner.
	This symbol on the product and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points. Please contact your local authority for further details of your nearest designated collection point.
	Corrugated fibreboard

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- Floor slippery when wet.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- Use only as described in this user guide.
- Use only manufacturer's recommended attachments.

Important Safety Instructions (continued)

- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorised service center.
- Do not put any object into openings.
- Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as petroleum, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use appliance in an enclosed space filled with vapours given off by oil base paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapours.
- If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Do not pull or carry by cable, use cable as a handle, close door on cable, or pull cable around sharp edges or corners. Keep cable away from heated surfaces.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- To unplug, grasp the plug, not the cable.
- Do not handle plug or appliance with wet hands.
- Turn off all controls before unplugging.
- Always connect to a properly earthed electrical socket. Do not modify earthed plug.
- Liquid must not be directed toward equipment containing electrical components.
- Keep appliance on a level surface.

SAVE THESE INSTRUCTIONS

ORIGINAL INSTRUCTIONS.

FOR OPERATION ON A 220-240 VOLT A.C. 50-60 HZ POWER SUPPLY ONLY.

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

IMPORTANT INFORMATION

- To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result.
- Plastic tanks are not dishwasher safe. Do not put tanks in dishwasher.
- Do not turn ON your appliance until you are familiar with all instructions and operating procedures.


Assembly

Required for Assembly




Phillips-head Screwdriver


You will need a Phillips-head screwdriver for assembly.

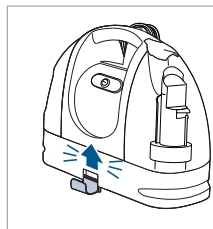


1. Slide the back plate of the flex hose clip into the opening on the front of the machine until it clicks into place.

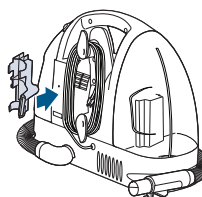

2. Take flex hose storage bracket and slide lower plate into opening on back of machine. Make sure screw holes line up.

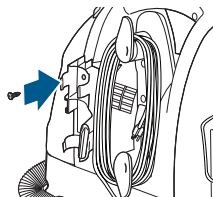

3. Insert screw and tighten with a screwdriver.

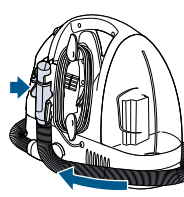

4. Wrap the flex hose around machine and place hose grip into bracket. Turn bracket latch clockwise to lock in place.



WARNING Do not plug in your portable carpet & upholstery cleaner until you are familiar with all instructions and operating procedures.

Cleaning Formulas


Find more formulas at [global.BISSELL.com](https://global.bissell.com).

This machine is compatible with BISSELL® formulas made for portable carpet cleaners. Always use genuine BISSELL formulas in your machine. Use of other cleaning formulas may harm the machine.


Filling the Clean Water Tank




1. Choose your formula.*

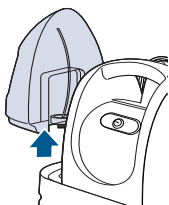


2. Remove clean water tank by lifting straight up and away from the machine.

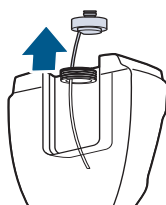


3. Unscrew cap on bottom of tank.

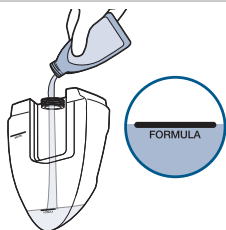

4. Add BISSELL® formula to the formula line.

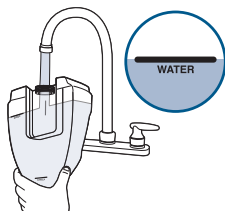

5. Fill with warm (140°F/60°C MAX) tap water to water line. Do not use boiling water. Do not heat water in the microwave. Place cap back on to tank and screw into place until secure.

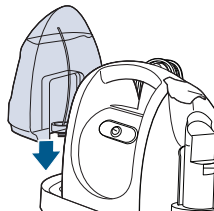

6. Slide tank down until it clicks into place.

*Compatible BISSELL formulas include: Pet PRO Oxy Spot & Stain, PRO Oxy Spot & Stain, Little Green™ Formula.

⚠ WARNING To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning formula intended for use with this machine.

Getting Ready to Clean


Tools vary by model. To shop all tools and accessories, visit [BISSELL.com/parts](https://www.bissell.com/parts).

Before You Clean

1. Vacuum to remove loose dirt from the area.
2. Spray any BISSELL® stain pretreat formula to soiled areas or stains.
3. Allow to sit for at least 3 minutes.
4. Clean following instructions below.

Choose Your Desired Tool

Tools vary by model.

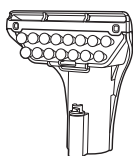

10cm Tool


Great for carpet stains, furniture and other hard-to-reach surfaces.




Spraying Crevice Tool

Great for narrow spaces and hard-to-reach crevices.


Attaching the Tool

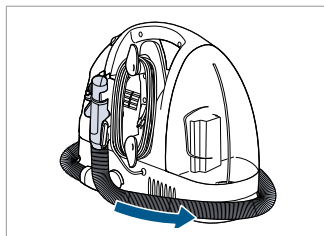


- 1.** Release the flex hose from the hose grip bracket latch and unwrap from machine.

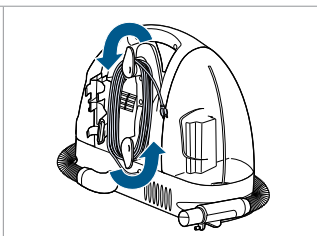

- 2.** Unwind cord and plug into outlet.

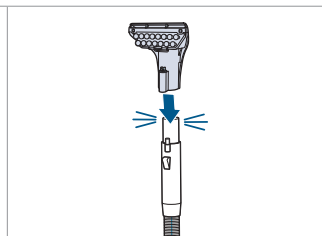

- 3.** Choose your tool and snap on the end of the hose.

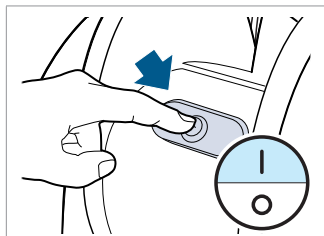

- 4.** Press the power button beneath the handle to turn it ON.

IMPORTANT

Check the manufacturer's tag before cleaning upholstery. If manufacturer's tag is missing or not coded, check with your furniture dealer. Test a small, hidden area for colorfastness and examine when dry. If color is affected do not use. Do not use on silk or velvet.




Using the Tools

10cm Tough Stain Tool and Spraying Crevice Tool (select models)



		
<p>1. While holding tool above desired area, press and hold trigger to spray solution.</p>	<p>2. Release spray trigger and gently scrub stain using bristles.</p>	<p>3. With trigger released, press tool firmly against surface and pull towards you to remove stain. Repeat as needed.</p>

After-Cleaning Care



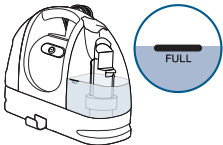
When finished using the product, wrap cord around cord wrap for storage. Store unit indoors in a dry location in an area where the product is not likely to get damaged.

		
<p>1. Empty dirty water tank when "MAX" fill line is reached. Do not allow water level to exceed MAX fill line.</p>	<p>2. To remove the dirty water tank, lift up tank release latch and remove the tank from the machine.</p>	<p>3. Empty dirty water tank. Rinse tank with warm water and place tank back onto machine. Lower tank release latch into place.</p>

Cleaning the Duckbill Gasket

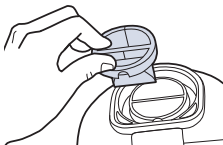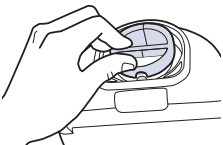	
<p>1. Remove duckbill gasket and rinse with water.</p>	<p>2. Reinstall gasket, ensuring that it is properly aligned.</p>

Cleaning the Tools

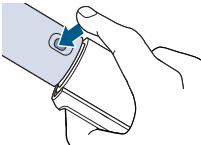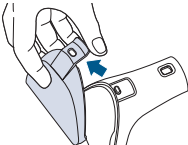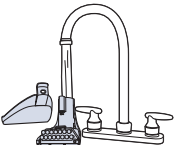		
<p>1. To disconnect tools, push down on button above hose grip and pull straight off. Do NOT twist tool to remove it.</p>	<p>2. Remove tool lens by pulling tab upward.</p>	<p>3. Rinse lens and tool with warm water. Allow to dry before reinstalling.</p>

⚠ WARNING Keep spray away from face. Failure to do so may result in personal injury.

Limited Warranty

This limited warranty is provided by BISSELL® International Trading Company B.V. ("BISSELL") and applies in Australia and New Zealand. It gives you specific rights. It is offered as an additional benefit to your rights under law. You also have other rights under The Australian Consumer Law or New Zealand Consumer Laws, whichever applies to you. You can find out about your legal rights and remedies by contacting your local consumer advice service. Nothing in this warranty will replace or lessen any of your legal rights or remedies. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care or contact your local distributor.

This warranty is given to the current owner of the product with the original sales receipt. The original sales receipt must include the product(s) purchased, the date purchased, and which country it was purchased from new. You must be able to evidence the date of purchase and show the product was purchased in Australia or New Zealand to submit a claim under this warranty. You will receive the warranty that is applicable to the country where your product was originally purchased, as shown on the original sales receipt. If you use the product outside of the country where it was purchased, your warranty may be void in BISSELL's sole discretion. It may be necessary to obtain some of your personal information, such as a mailing address, to fulfill the terms of this warranty. Any personal data will be handled pursuant to BISSELL's Privacy Policy, which can be found at global.BISSELL.com/privacy-policy.

Limited Two-Year Warranty

For two years from the date of purchase by the original purchaser, subject to the "EXCEPTIONS AND EXCLUSIONS" identified below, BISSELL will repair or replace (with new, refurbished, lightly used, or remanufactured components or products), at BISSELL's option, free of charge, any defective or malfunctioning part or product.

BISSELL recommends that the original packaging and original proof of purchase with the date of purchase and country where purchased be kept for the duration of the warranty period in case you want to redeem the warranty during the warranty period. Keeping the original packaging will assist with any necessary re-packaging and transportation but is not a condition of the warranty.

If your product is replaced by BISSELL under this warranty, then the new item will benefit from the remainder of the term of this warranty (calculated from the date of the original purchase). The period of this warranty shall not be extended whether or not your product is repaired or replaced.

*Conditions of Warranty

This warranty applies to products used for personal domestic use and not commercial or hire purposes. Consumable components and attachments such as filters, belts, shells, water tanks, scraping strips, brushes, and mop pads, which must be replaced or serviced by the user from time to time, are not covered by this warranty.

This warranty does not apply to any defect arising from fair wear and tear, including but not limited to the battery discharging time shortening due to the aging or use. Damage or malfunction caused by the user or any third party whether as a result of accident, negligence, abuse, neglect, or any other use not in accordance with the user guide is not covered by this warranty. An unauthorised repair (or attempted repair) may void this warranty whether or not damage has been caused by that

repair/attempt. Removing or tampering with the Product Rating Label on the product or rendering it illegible will void this warranty.

Except as set out below, BISSELL and its distributors are not liable for any loss or damage that is not foreseeable or for incidental or consequential damages of any nature associated with the use of this product including without limitation loss of profit, loss of business, business interruption, loss of opportunity, distress, inconvenience, or disappointment. Except as set out below, BISSELL's liability will not exceed the purchase price of the product.

BISSELL does not exclude or limit in any way its liability for (a) death or personal injury caused by our negligence or the negligence of our employees, agents or subcontractors; (b) fraud or fraudulent misrepresentation; (c) or for any other matter which cannot be excluded or limited under law.

To make a claim under this warranty contact BISSELL Australia PTY LTD (details below). Contact BISSELL prior to returning any goods. Where agreed, BISSELL will reimburse reasonable postage / handling costs (if any) for returning goods to BISSELL. To claim expenses incurred in making a claim under this warranty please provide BISSELL with a copy of the receipt of the expenses by email or post.

For Australian Consumers Only: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Important Notes

Please keep your original sales receipt. It provides proof of the date of purchase and where it was purchased in the event of a warranty claim. See warranty for details.

Please note that using your BISSELL machine outside of its country of original purchase and/or use with a power converter may damage your BISSELL machine and damage caused by mismatched power voltage will not be covered by your warranty.

Please note that putting vinegar, bleach, dish soap, detergent, homemade soap, and other non-BISSELL products in your BISSELL machine may damage your BISSELL machine. Damage caused by using non-BISSELL products in your machine will not be covered by your warranty.

Consumer Care

If your BISSELL product should require service or to claim under our limited guarantee, please contact us.

Australia

Telephone: 1300 247 735
Website: BISSELL.com.au
Address: 789 Springvale Road, Mulgrave, Victoria 3170
Email: consumercaureau@bissell.com

New Zealand

Telephone: 0800 247 735
Website: BISSELL.co.nz
Address: 789 Springvale Road, Mulgrave, Victoria 3170
Email: consumercaurenz@bissell.com

Need more support?

Head to **global.BISSELL.com** to troubleshoot, order spare parts, view your warranty, and more.



INFO



VIDEOS



PARTS