

3 Way/FeatherWeight Vacuum

2024F

No Power

Check the entire power cord and plug to see if it is damaged. If the cord is damaged,

BISSELL Consumer Care: refer to the product changeover guide.

External Support: Contact BISSELL

- Is the power cord plugged firmly in the outlet?
 - If yes, the cord is plugged firmly into the outlet...
 - Check for a blown household fuse or breaker.
 - If not firmly plugged in...
 - Plug cord firmly into outlet.

BISSELL Consumer Care: please refer to the product changeover guide.

External Support: Contact BISSELL