

## Why won't my Proheat 2X® Revolution™ spray to the hose?

Answer:

[Watch The Video](#)

Use the following steps if your ProHeat 2X® Revolution™ is not spraying through your hose:

NOTE: the trigger on the hose must be held in order for the machine to produce spray.

- The clean water tank must have a sufficient amount of fluid in order to function properly. If your tank is empty or does not have enough fluid, you will need to remove and fill your clean tank.




- Your clean tank should sit flush with the machine. Remove the tank, inspect it for deformities/damage, and firmly push it back in place leaving no gaps.

NOTE: using heated water can deform the tank and cause it to sit improperly. If your tank is deformed, you will need to order a new tank.



- If your machine still won't spray, unplug the machine, remove the water tank, and inspect the red valve on the bottom of the tank.
- Over a sink, push up on the black insert located in the red valve to ensure that it leaks water. If it does not leak water, you will need to order a new tank.

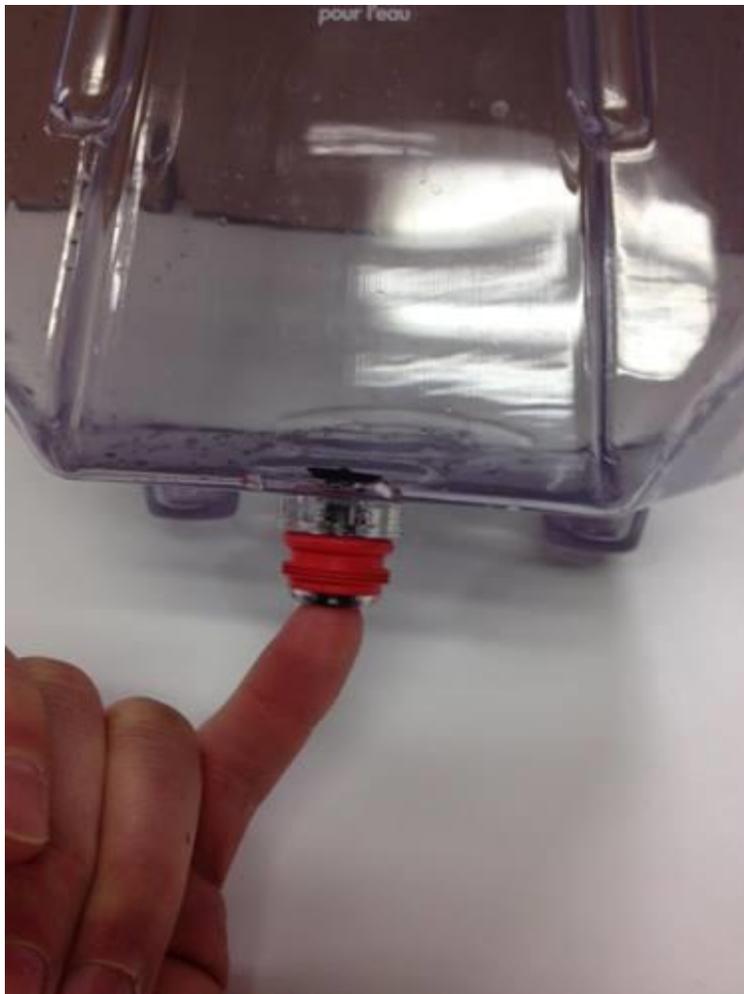

- If the hose still won't spray, it may have lost its prime. Follow the next steps to correct this issue.

NOTE: priming your machine allows fluid to flow through the system. This is a regular practice for machines with active spray systems.

- Turn off and unplug your machine and keep it in the upright position. Open the Accessory Hose Door and using a ball point pen, press into the small, circular, opening (left side) until water begins to bubble up.



- Insert the hose firmly into place until the red button latches. Plug in your machine and without a tool connected to your hose, press the trigger until you get a strong spray.

NOTE: it may take up to 20 seconds before you see spray. Reattach a tool to the end of your hose and test for spray.



If your machine still won't spray, please [contact us](#). A representative will be happy to assist you.