

## How do I clean my CrossWave™ brush roll?

Answer:



[Watch The Video](#)

Use the following steps to clean your CrossWave™ brush roll:

- Unplug your machine and remove the brush window to access the brush roll. To remove the brush window, grab the window by the pull tab and pull upward.



- To remove the brush roll, grab the brush roll tab and pull upward. Under warm water, rinse both the brush roll and the brush roll window.
- Once completely dry, replace the brush roll and reattach the brush roll window. Replace the brush roll by inserting the grey tab end into the right side of the machine and then pressing down on the colored tab end until it clicks into place.

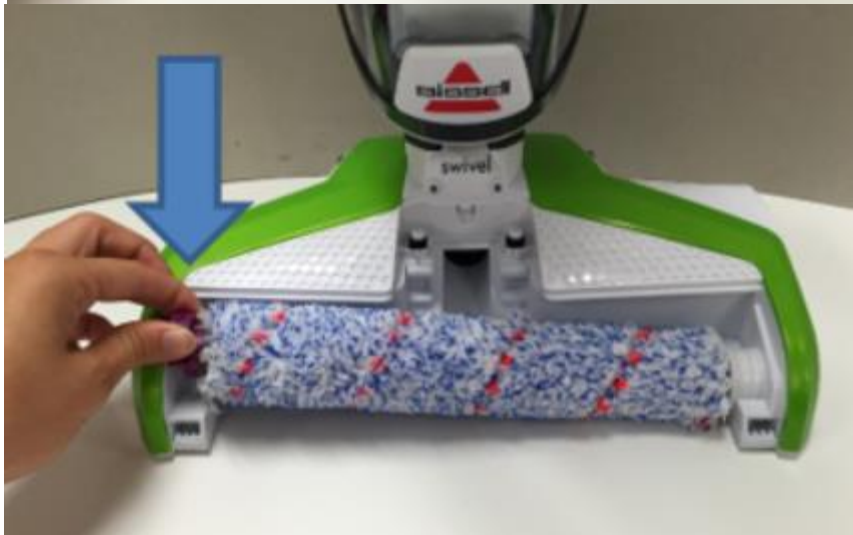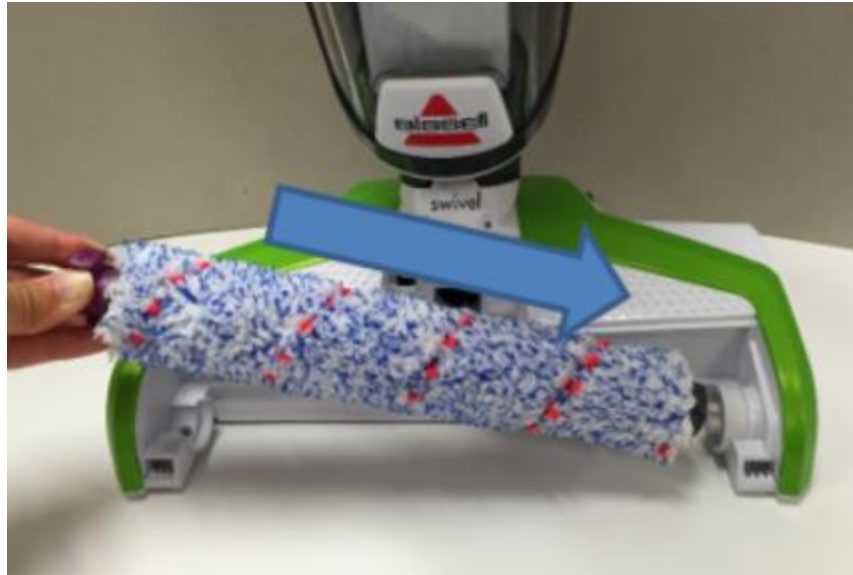

- Reattach the brush roll window by lining up the tabs on the front edges of the foot and then pushing the window into place until it clicks into place.



If you have trouble with any of the above steps, please [contact us](#). A representative will be happy to assist you.